

Flow Calibration and Reset

From the main Calibration Screen, Select **SHIFT, CTRL, ALT, & R** all at the same time. (As in Fig 1.).

This will put the Calibration into reset mode, as shown by the word **RESET**, in the top left corner.

Now perform 20 strokes, Slow, Medium, and Fast. (As in Fig 2.).

When complete, select **FINISH**, and **CHECK**.

Your new Calibration accuracy should be around 0.3%. (As in Fig 3.)

Fig 1.

